



BINJA
SYSTEM

**Binjasystem
weather-strip set**



BEFORE



AFTER

FACTORY

Tel. +358 8 817 0388



Fax +358 8 817 3299

www.binjasystem.com


binja@binjasystem.com

Mounting Instructions


1. Measure required strip length for each installation position separately and cut the strip to length (butt or miter joint).

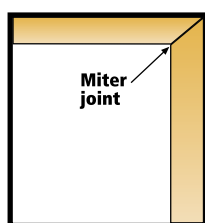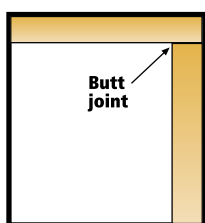


2. Close door/window and press the Binjasystem strip against it so that the flexible seal is halfway compressed and hold in this position. Fasten with nails or screws on to frame, or mark the strip position with a pen for concealed fixing.

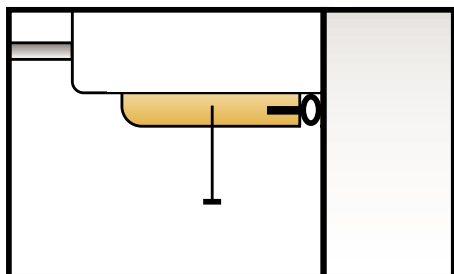

3. Repeat this procedure for each strip in the following order: 1. top, 2. bottom, and 3. sides. If desired, install a protective aluminum strip to prevent damage to threshold.

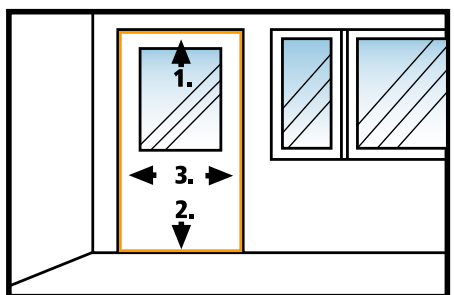

4. Note! Before sawing the molding to length, remove the flexible seal from the molding at the cutting point and cut it to length with e.g. scissors.

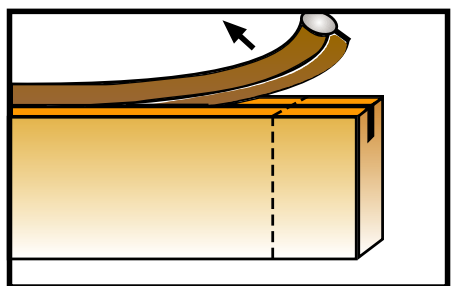

BINJA
SYSTEM